

# SureLock™ Attachments for Weight System (PN 388045)

## CONTENTS

- SureLock Attachments (2)
- Threaded Barrels (4 + 1 spare)
- Threaded Screws (4 + 1 spare)
- Washers (4 + 1 spare)


## REQUIRED TOOLS

- Medium Blade Screwdriver
- 1/8" (3mm) Hex Key


## SureLock™ Attachment to WTX Backplate or Ultralight Plate Installation

**NOTE:** The procedures are the same for securing the SureLock attachments to the WTX backplate or ultralight plate using either the rubber harness or one piece webbed harness.

1. Mounting hole locations on SureLock attachments, WTX backplate and ultralight plate (Figs. 1 & 2).

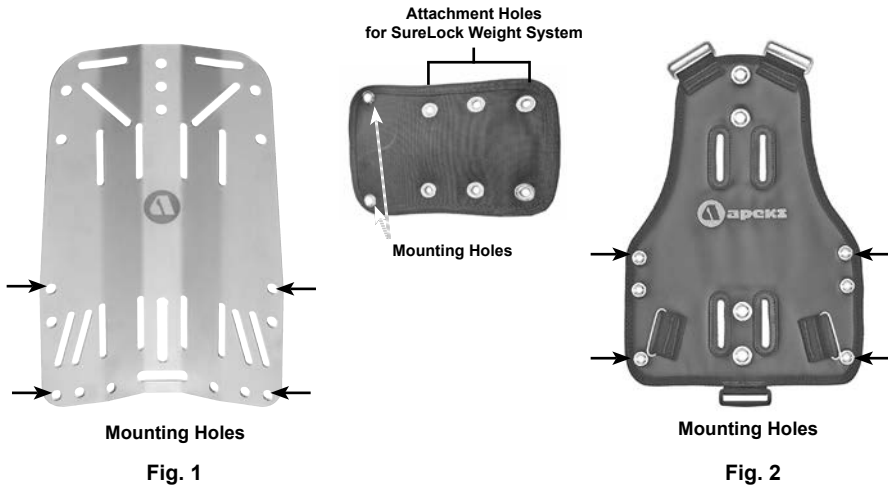

SureLock Attachment

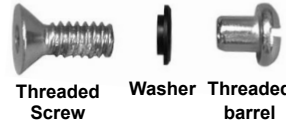

Threaded Screw Washer Threaded barrel

2. Align the two mounting holes at the side end of the SureLock attachment with the mounting holes on the lower side of the plate (Figs. 1 & 2). The attachment mounts to the front of plate. The waistband attachment loop faces the back of the plate, with the waistband of the harness behind the SureLock attachment (Fig. 3). Insert the washer, small diameter first, into the mounting hole on the back of the plate followed by the threaded barrel (Fig. 4).



Rear View  
Waistband lies behind attachment

Fig. 3



Fig. 4

3. Insert the threaded screw into the mounting hole on the front of the plate. Using a medium blade screwdriver on the barrel and a 1/8" (3mm) hex key on the screw, tighten the two together (Figs. 5 & 6). Repeat process for the other mounting hole. Repeat the entire process for the other SureLock attachment.



Fig. 5



Fig. 6

Assembly of the SureLock attachments to ultralight plate or WTX backplate is now complete.

If you have any questions regarding the information found in this manual, please contact your regional Apeks Dealer or Distributor. Distributor information is available on the Apeks website at: [www.apeks.co.uk](http://www.apeks.co.uk)