

# Bladder Evacuation Tool

## Instructions


P/N: AMTC-M2026, Dual



1. Insert Bladder Evacuation Tool into vacuum hose. Tool is designed to fit 1", 1-1/2", and 2" vacuum hoses.



2. Turn the knurled locking nut clockwise on each oral inflation tube until it stops.

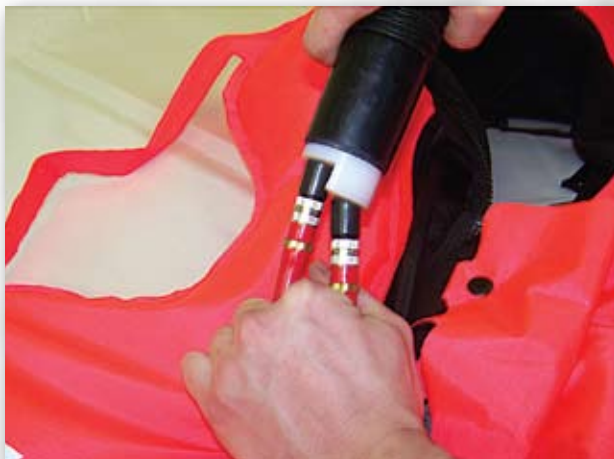

3. With the vacuum on, insert the oral inflation tube mouth pieces into the ports on the Bladder Evacuation Tool.

Depress the tubes and hold firmly in place as the bladder deflates completely.



Upon completion of the evacuation, turn the knurled locking nuts counter clockwise to the locked position.